

Access Display Group, Inc.

TEL: 877-794-6499 FAX: 877-842-5126

WEBSITE: www.swingpanels.com

E-MAIL: customerservice@swingpanels.com

WALL MOUNTING

POSTER SWINGFRAMES

INSTRUCTIONS

Simple hand tools required:
Level, Pencil, Drill
Phillips Head Screwdriver

Back of Swingframe



Wood Z-Bar




Insert screws through Wood Z-Bar into wall and secure into wall anchors


Step 1.

Mount Wood Z-Bar on wall (use level). Measure where you want the top of the frame to be positioned. Drill holes in wall.

Secure with wall anchors and screws.

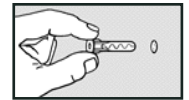

Open Swingframe

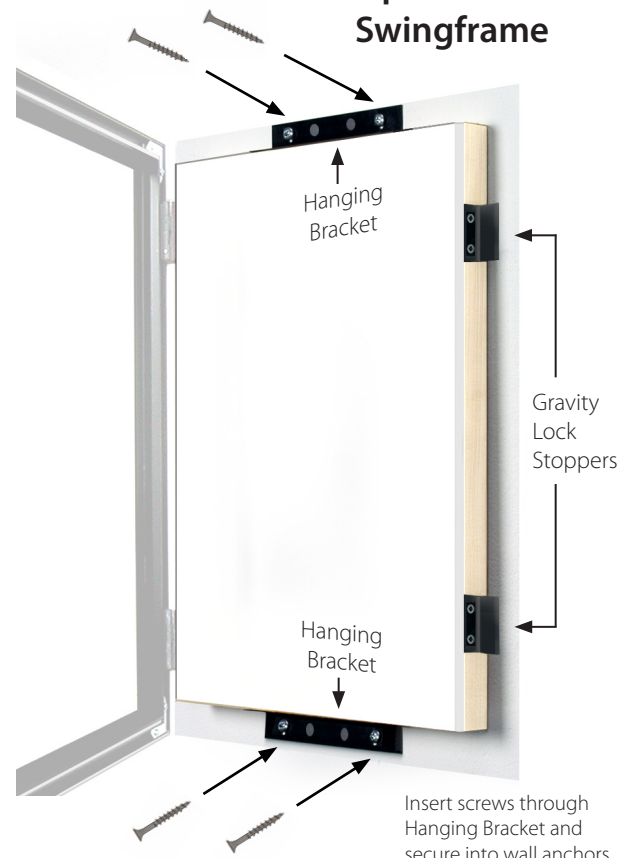

Step 2.

After mounting Swingframe onto Wood Z-Bar, mark Hanging Bracket holes with pencil. Remove (lift) frame from wall, drill holes and insert wall anchors provided (or your own).

Step 3.

Replace Swingframe over Wood Z-Bar. Insert screws through Hanging Brackets top and bottom and secure into wall anchors with screwdriver.

Note: Swingframe sizes less than 16" x 20" mounts to wall without Wood Z-Bar.